



INSTRUCTION MANUAL & WARRANTY CARD



INFRARED COOKTOP

VIRC 04
Thoughtfully Engineered

ENERGY
EFFICIENT

MULTIPLE
COOKING MODES

1 YEAR
PRODUCT
WARRANTY

Dear Customer,

Congratulations!! For being the proud owner of V-Guard Infrared Cooktop. You have made an excellent choice and we hope you will enjoy all its specialities.

This product comes to you from a company committed for total quality and dedicated customer delight from 1977.

V-Guard Infrared Cooktop has been produced under stringent quality norms coupled with good manufacturing process which will ensure years of trouble free cooking pleasure. A reliable product from a reliable company who is concerned about safety and comfort.

Please read this instruction manual carefully before use.

Product features

- Feather touch controls
- Easy to operate
- Wide working range
- High/Low voltage cut off
- 4 Hour timer function
- HOT Warning indication
- 11 levels of power & temperature setting
- 6 cooking Modes
- Energy / voltage indicator
- Light weight
- Child lock function
- Fast and efficient cooking
- Environmental friendly
- Digital display

Operating instructions

1. Plug the power cord firmly into a rated socket (16 A) and switch ON the main switch.
2. Place the cookware along with food in the center of the cooking zone.
3. Turn on the unit using the 'ON/OFF' switch.
4. Select the desired cooking options by using the control switches.
5. Dosa/Chappathi, Idli, Boil, & Milk are the auto functions which are self monitored.
6. Manual, Fry/BBQ are manual functions which is to be controlled manually by adjusting the Power or Temperature levels.
7. To make manual function a programmed one, activate the Timer key by pressing it and using up/down keys to set the proper time as per requirement.
8. To switch off the unit use 'ON/OFF' switch, wait for cooling fan to turn off and remove the plug.
9. 'Volt /units' switch can be used to check the voltage /energy. This will be updated in every second.

Cooking Functions:

1. Manual:

This function is applicable for all kind of cooking which requires heat to be constantly monitored. Place the cookware over the cook top, turn on the unit by pressing the 'ON/OFF' switch then product will start with default cooking function 'Manual'. You can adjust the power as per your need in 11 different setting by using 'Up' and 'Down' switches. The different levels of power settings are 200W, 400W, 600W, 800W, 1000W, 1200W, 1400W, 1600W, 1800W, 2000W and 2200W.

2. Fry/BBQ:

This function is applicable for food that need to be cooked at constantly monitored temperature settings. In this function the temperature can be adjusted by using 'Up' and 'Down' switches. You can adjust the temperature as per your need in 10 different levels, such as 80°C, 120°C, 160°C, 240°C, 320°C, 400°C, 480°C, 520°C, 560°C, 600°C and 650°C. The 6 timer function can be used to set the time of working from 0:01 hours to 4:00 Hour.

3. Dosa/Chappathi:

This function is specially designed for making dosa, chappathi and similar items. The power or temperature can't be changed in this function. But the duration of working time can be manually set from 0:01 Hour to 4:00 Hour by using timer function.

4. Idli:

This function is suitable for making Idli and similar items. The power or temperature can't be changed in this function. But the duration of working time can be manually set from 0:01 Hour to 4:00 Hour by using timer function.

5. Boil:

This function is suitable for boiling water, making tea etc. The power or temperature can't be changed in this function. But the duration of working time can be manually set from 0:01 Hour to 4:00 Hour by using timer function.

6. Milk:

This function is suitable for heating the milk since the Infrared cook top will warm the milk with small heat power. This is an auto function and so the power or temperature can't be adjusted manually. But the duration of working time can be manually set from 0:01 Hour to 4:00 Hour by using timer function.

Other Functions:

1. Child Lock

To enable the child lock function, press on 'PLUS (+)' and 'MINUS(-)' together and further no change in settings is possible. After pressing the child lock function, display will show as "LOC". For disabling the child lock function, press and hold the 'PLUS (+)' and 'MINUS(-)' together, then "LOC" will disappear from the display.

2. Timer Function

Timer function can be used to set the cooking time (0:01 Hour to 4:00 Hour). For setting the timer use the 'Timer' switch, the display will appear as to be 0:01 for manual functions and default time/current running time for the auto functions, the time can be adjusted by pressing the 'Up (+) & Down (-)' switches. The Infrared cooktop will turn off when the set time has been elapsed.

Safety Instructions

1. Ensure that the Infrared Cooktop is operated at the rated input voltage.
2. A separate power socket of 16A should be used for operating the Infrared Cooktop safely.
3. Place the Infrared cooktop in a well ventilated area and on a flat platform with at least 10 cm away from side and back wall.

4. Keep the Infrared Cooktop away from other heat sources– stove, burner, ovens etc and direct sunlight. Avoid exposure to extreme heat and moisture.
5. Do not flush the Infrared Cooktop with water as it can damage electrical components.
6. Do not heat empty pans on the Cooktop to avoid danger due to high temperature.
7. Avoid the using of Infrared Cooktop if any breakage or crack is found on the top plate.
8. Keep the Infrared Cooktop away from the reach of children.
9. Keep the top surface of the Infrared Cooktop clean and free from any foreign particles and water droplets/other fluids.
10. Do not attempt to operate the cooktop if it is damaged.
11. Always heat oil slowly and watch as it boils before deep frying.
12. Avoid keeping objects such as knife, fork, spoon or lid etc. on the surface of glass panel, because they may become hot.
13. Do not heat canned food before opening cover to avoid danger of explosion.
14. Unplug the power cord from the socket after cooking, while cleaning or when not in use.
15. Do not clean the Infrared cook top immediately with water after cooking, as the glass top may crack.
16. Do not use chemicals or petroleum products, organic impregnates to clean your stove. They may damage the crystal glass
17. Do not tamper with the safety interlocks of the system.
18. Do not place heavy vessels and heavy loads on the heater to avoid damage to the unit.
19. This Infrared Cooktop is for domestic use only.
20. Don't touch/unplug the product when 'hot' indication is on even after cooking.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. That appliances are not intended to be operated by means of an external timer or separate remote-control system.

Maintenance and Cleaning

1. Before cleaning, please switch off the power and remove the plug from the supply socket.
2. Before cleaning please ensure that the Infrared Cooktop is cool. Do not clean the appliance when it is in hot condition.
3. Please do not use the gasoline, lacquer thinner to clean the unit.
4. Do not wash or immerse Infrared Cooktop in water.
5. Please use the vacuum tube cleaner to clean the in and out vent of the product.
6. To clean the Cooktop and control panel, first wipe it with wet cloth and then with a sponge using mild detergent. Finally wipe it to dry with a soft cloth.

Technical specifications

Model	:	VIRC 04
Power	:	2200 W (Maximum)
Input Voltage	:	230 V AC, 50 Hz

Trouble shooting

Error Code	Symptom	Possible reason	Action
E1	Product shows error code with beep sound and stop working automatically	Temperature sensor is open/damage	Contact authorised service center
E3	Product shows error code with beep sound and stop working automatically	Cooling fan damage	Contact authorised service center
E4, E5	Product shows error code with beep sound and stop working automatically	The input voltage is too Low and high respectively	Wait until the voltage comes to normal
No beep sound and display after power is switch on		The power cord is not plugged properly, Power supply is not proper	Check the power cord plug, Check the supply, Contact service center
Product turns off / power reduces		The internal temperature becomes high	Wait until the internal temperature reduces

Terms and conditions of Warranty

1. Retain the original sale bill and warranty card, which should be shown to our service personnel for scrutiny while sending your Infrared Cooktop for service to our authorized service centre.
2. The warranty does not cover damage to the Infrared Cooktop due to mishandling, negligence, breakage or cracking of plastic parts or crystal glass.
3. If the Infrared Cooktop is tampered or opened by any unauthorized person, the warranty is void.
4. All repairs within the warranty period, arising from manufacturing defects will be done 'free of charge'.
5. Free service and replacement, if any, under the warranty period will not result in the extension of the warranty period under any circumstances.
6. Defective components which are exchanged both under 'chargeable' and 'free of charge' basis become the property of the company.
7. Warranty is void if the Infrared Cooktop is used for any purpose other than domestic use.
8. Bringing the product to V-GUARD service centre or delivery to authorized dealer for its service is the responsibility of the owner.
9. Warranty will be void if the product is not used as per the suggested application.
10. The warranty will not be applicable if product failure caused by certain unusual conditions such as Water Logging, Misuse, Transit Damage during purchase, abnormal voltage supply, lightning, acts of God, or while in transit to or from the service center.
11. The warranty obligation does not also cover charges, if any, incurred on account of services rendered which are outside the ambit of warranty.
12. Please register your V-Guard product in the company web site at www.vguardservice.in to avail paperless warranty. (Specifications are subject to change without prior notice)
13. Crystal Glass shall be replaced by Company only once during the 12 months period from the date of purchase and subject to technical evaluation.

SCAN TO AVAIL THE
**DIGITAL
WARRANTY**
BY REGISTERING YOUR
PRODUCT ONLINE



V-Guard Care
0120 485 0100
1860 180 3000
customer-care@vguard.in
© 9633503333



V-Guard Industries Ltd.,
Registered Office: 42/962,
Vennala High School Road,
Vennala, Kochi - 682028, Kerala.
Ph: 0484-2005000, 4335000
www.vguard.in



www.vguard.in/home/customer-care
CIN: L31200KL1996PLC010010

PLASTIC WASTE EPR REGISTRATION
NUMBER: B0-13-000-07-AAACV5492Q-22